
King Slide

1) Remove the inner rail

- 1 Pull tab forward and take out inner rail.
- 2 Push and slide middle rail back.

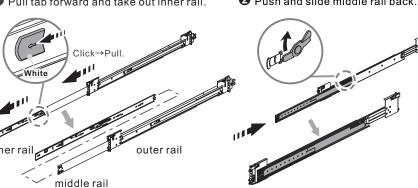

(2) Check hole type on rack post


**Check hole type on rack post. Choose suitable pin of bracket to install if needed.

9.5 Square Hole (Pre-installed)
For 9.5 Square hole frame : Install slide rail as usual.

7.1 Round Hole

For 7.1 Round hole frame: Please refer to the manual: Replacing the suitable pin.

 M5 Bracket Screw (Pre-Installed)







SCREW SACK			
	Inner rail	4	þ
® #6-32x4L	Inner rail	4	þ
© Round hole pin	For Ø7.1 Round Hole		
① #10-32x13L	For #10-32 Thread Hole	(4)	#
© M5x9.0L-P0.8	For Shipping	(4)	(par
F) M3x4.0L-P0.5	For CMA BKT	•	ı

3) Install the inner rail onto the chassis

Detach inner rail from standoff

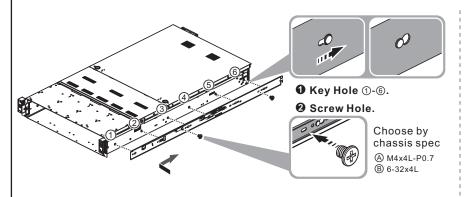


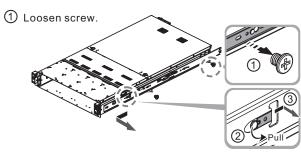


② Pull the latch upward and remove the keyhole from standoff and slide inner rail forward to remove inner rail.


(4) Fix the outer rail/bracket assembly to the frame

Detach bracket from rack post

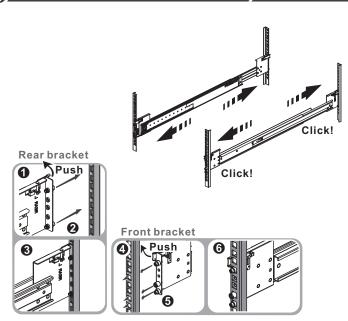

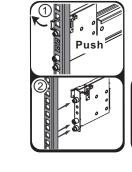

Front bracket

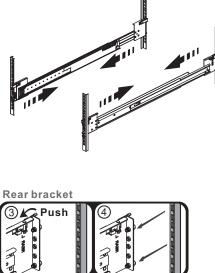

^{*} Please repeat the detached steps for the other side.


^{*} Please repeat installation steps for the other side.

King Slide

(5) Insert the chassis to complete the installation


12 Pull the middle rails fully extended in lock position, ensure ball bearing retainer is located at the front of the middle rails.



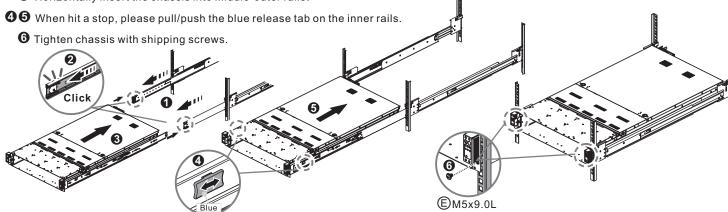


• Remove the chassis from rack

- 1 2 Loosen shipping screws to pull out chassis.
- 3 4 Pull the disconnect tab forward to remove chassis at the full extension position.

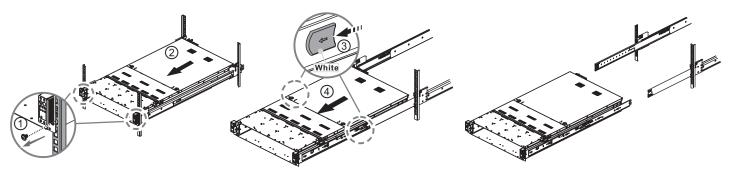

Install in #10-32 rack

- Remove pins for square and round hole rack. Remove nut on the bracket.
- 234 Use #10-32 screw in the accessory bag, then fasten nut on the rack post.

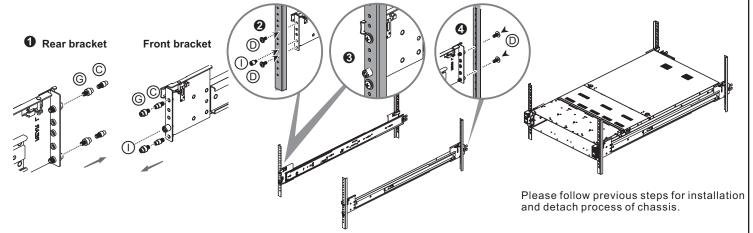

Accessory for CMA bracket

When using CMA, please use the accessory. It is OK not to use accessory when no CMA requirements.

